

Overview

The two Intel Ethernet SLDs contain components that support the Intel 1GB and 10GB Ethernet controller chips. The SLDs are based on driver version 8.4.21.0, which can be downloaded from the Intel website. Only the SLDs are supplied in the ZIP file. You will need to run the installation utility to extract the driver files. Here is the list of files:

Pro1000:

- e1000325.din
- e1000325.inf
- e1000325.sys
- e1000msg.dll
- EtColnst.dll

Pro 10GB:

- ixgb325.inf
- ixgb3251.din
- ixgb3251.sys
- ixgbmsg.dll

Instructions:

1. **Install** the Ethernet driver on an XP Pro system to capture the files listed above.
2. **Download** the ZIP file containing the SLD.
3. **Extract** the contents of ZIP file to your hard drive.
4. Create a new directory in the same directory as the SLD called **Files**.
5. **Copy** the extracted driver files listed above to the **Files** directory. The Repository path is relative to the SLD. The Repository has been setup so the files are one directory level below the SLD.
6. **Import** the SLD into the XPe data base using Component Database Manager.

For any questions, please contact us at www.sjjmicro.com / support@sjjmicro.com.