

## Overview

The NVIDIA Video driver SLDs contains several NVIDIA video graphic components. The components are based on driver versions 7.19 and 7.18. Version 7.19 comes from a video card maker Kaser – FX5200-128. Version 7.18 comes from NVIDIA website. Only the SLDs are supplied in the ZIP file. You will need to run the installation utility to extract the driver files.

## SLD Instructions:

1. **Install** the ATI video driver on an XP Pro system to capture the files listed above.
2. **Download** the ZIP file containing the SLD.
3. **Extract** the contents of the ZIP file to your hard drive.
4. Create a new directory in the same directory as the SLD called **Files**.
5. **Copy** the extracted driver files listed above to the **Files** directory. The Repository path is relative to the SLD. The Repository has been setup so the files are one directory level below the SLD.
6. **Import** the SLD into the XPe data base using Component Database Manager.

For any questions, please contact us at [www.sjjmicro.com](http://www.sjjmicro.com) / [support@sjjmicro.com](mailto:support@sjjmicro.com).